

1. HW Version check

Power on SB CHARGER by power source plug in or by smart battery insertion. In bottom part of OLED screen HW version will be displayed in the following format: V: **2.1**/1.5. First number tells HW version of SB CHARGER, second number tells FW version.

2. HW Ver 2.1 FW upgrade

All necessary files are in folder HW Ver 2.1

- 1.** Disconnect power supply and remove battery from SB CHARGER
- 2.** Press and hold the button inside SB CHARGER
- 3.** Insert the USB-C cable already connected to your computer
- 4.** Computer will mount new external flash memory unit
- 5.** Release the button
- 6.** Copy latest FW file from HW Ver 2.1 folder (with *.uf2 extension) to newly mounted external flash memory unit
- 7.** When upgrade is done, blue LED on SB CHARGER will stop flashing, remove the USB-C cable then
- 8.** Unit is ready with upgraded FW